

NOTICE: This .pdf file should not be used as the source to create final, printed pieces of the file it represents. Rather, it is a low resolution visual reference only containing relevant information regarding the file (e.g., color, text and image placement, etc.)





FLUID

INSTRUCTIONS





QUICK REFERENCE PROGRAMMING INSTRUCTIONS

1. Press **RESET** button to reset the system—This is only done if this timer has never been programmed. (Doing this erases all settings).


2. Select preferred language

- Turn the rotary dial to **LANGUAGE** position.
- Press the **RAIN DELAY** button once.
- Press the  button until you reach the desired language
- Press  to confirm your selection.
- Turn the rotary dial to exit this mode.





3. Set time and date

- Turn the rotary dial to the **DATE & TIME** position
- Press and hold the “+” button to advance the clock to the correct time of day. When the correct time of day is reached, press the  button to lock in the time.
- Press the “+” and “-” buttons to set the correct year, then press .
- Press the “+” and “-” buttons to set the correct month, then press .
- Press the “+” and “-” buttons to set the correct date, then press .

4. Set start times for programs A or B



- Turn the rotary selector to the **CYCLE START TIMES** position (for A or B).
- Press “+” or “-” key to advance to the desired start time. Press .

5. Set watering frequency for programs A or B

- Turn the Dial to **WATERING DAYS** (in program A or B).
- Press  until the desired day of the week flashes and press  to select the day. Days selected will have a rain drop icon over the day.
- Press  if you want to skip the day flashing.
- For deselecting a day press  until the day flashes and press **C**.
- Continue until all the desired days are selected.

Note: For “Watering Interval” or “Odd/Even” option, see owners manual

6. Set watering duration for each station (programs A or B)

- Turn rotary dial **DURATION** (in program A or B).
- Press the “+” or “-” to set the watering duration for station 1 press  to save and advance to station 2.
- Repeat to program the remaining station.
- To review the watering durations press the  button.


**CONTINUES ON
REVERSE SIDE**

7. Turn dial to **AUTO** to run your program

Note: Verify that the "RAIN SENSOR" switch is in the bypass position unless a rain sensor is attached


COMMONLY USED FUNCTIONS

Rain Delay










1. Ensure the rotary selector is on the **AUTO** position.
2. Press the **RAIN DELAY** button to automatically delay watering for 24 hours.
3. If a longer Rain Delay is desired, use the "+" or "-" button to increase or decrease the setting.
4. Press  or wait 30 seconds and the selected Rain Delay will begin.
5. The **C** button stops the Rain Delay and scheduled watering will resume.

fold

Water Budgeting




 




1. Turn rotary dial to **BUDGETING** position.
2. To increase or decrease the percentage, press the "+" or "-" button.
3. Press  to save setting.

Manual Watering

1. **Manual Watering** (All Programs)
 - Turn the rotary dial to **AUTO**.
 - Press the  button and then press the  button once. The screen should display "A B Manual all".
 - Press the  to begin watering.
2. **Manual Watering** (Only program A or B)
 - Turn the rotary dial to **AUTO**.
 - Press the  button and then continue to press the  button until "MANUAL ALL" with the program you want to water.
 - Press the  to begin watering.
3. **Manual Watering** (One station in program A or B)
 - Turn the rotary dial to **AUTO**.
 - Press the  button and then continue to press the  button until "MANUAL STATION __" with the station you want to water.
 - Press the "+" or "-" key to enter the desired duration.
 - Press the  to begin watering.

fold

fold

 <p>FLUID</p> <p>F 801.295.9820 F 801.951.3813</p> <p>www.fluid-studio.net 1065 South 500 West Bountiful, Utah 84010</p>	<p>PROOF NO: 1</p> <p>DATE: 9.5.07</p> <p>DES: ts SPCC: MZ</p> <p>JOB NO: 07WTM005071</p> <p>CLIENT: Orbit</p> <p>SKU: 57926</p> <p>UPC: NA</p> <p>FILE NAME: 07WTM005071 57926-50 rC.qxd</p> <p>SOFTWARE: Quark 6.5</p>	<p>DIMENSIONS:</p> <p>FLAT: W: 4.625" H: 9.25"</p> <p>FINISHED: W: 4.625" H: 2.25"</p> <p>COLORS:</p> <p>Registration  Outline  Inkjet   1  2  3  4</p>	<p>Printers are responsible for meeting print production requirements. Any changes must be approved by the client and Fluid Studio.</p> <p>FINISHED WORK MUST MEET INDICATED SPECIFICATIONS ON THIS FORM.</p> <p>© 2007 Fluid Studio. This work is the property of Fluid Studio, and cannot be used, reproduced or distributed in any way without their express permission.</p>
	<p>ADDITIONAL INSTRUCTIONS:</p> <p>File prints black + PMS 280</p>		

