




# YARDWORKS™

## 1 Dial 1 Outlet Hose Faucet Timer

model number 91519 | contact us 1.801.299.5555

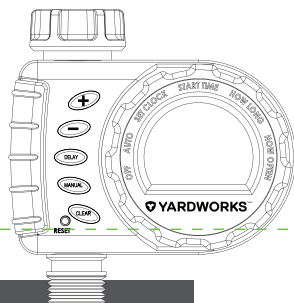

### IMPORTANT:

Read and follow all safety rules and operating instructions before using this product.

Instruction Manual

1

model no. 91519 | contact us 1.801.299.5555

Important, please read!

When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.

Filter traps dirt particles, prolonging life of timer. Clean filter regularly and replace if worn.


For outdoor use with cold water only. Not for use with appliances.

2

model no. 91519 | contact us 1.801.299.5555

Timer Features

- Hose tap connection
- +/- Buttons
- Delay
- Manual
- Clear
- Outlet
- Reset
- Filter
- Dial
- Low battery indicator

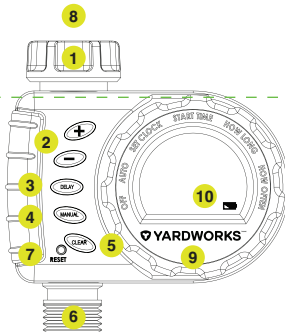

- DIAL**—Rotate the dial to customize your watering schedule  
**DELAY**—Use this button to select RAIN DELAY mode  
**RESET**—Press to clear all programming  
**MANUAL**—Press to water manually  
**CLEAR**—Press to clear programming  
**+/- Buttons**—Use these buttons to adjust time and system setup



**AUTO**—Timer waters according to your customized schedule

- SET CLOCK**—Set the time of day  
**START TIME**—Select what time you would like to start watering  
**HOW LONG**—Determine how long to water  
**HOW OFTEN**—Choose how often you will water  
**OFF**—Turn off all watering

3

model no. 91519 | contact us 1.801.299.5555

Installing the Batteries

- Installing the Batteries**
- Remove the tray on the back of the timer by sliding or pulling it out.
  - Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.

Note: Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not pull out easily. Used up or dead batteries must be removed from the timer and disposed of properly. Replace batteries when low battery icon appears on display. Do not dispose of batteries in fire. Batteries may explode or leak.

4

model no. 91519 | contact us 1.801.299.5555

Programming the Timer

### Set Clock



- Turn dial to SET CLOCK.


- Using the +/- buttons, set the time of day, including AM and PM. Timer advances faster if button is held down.
- Turn dial to save changes.

### Start Time



- Turn dial to START TIME.
- Using the +/- buttons, set your start time, including AM and PM. Timer advances faster if button is held down.
- Turn dial to save changes.

### How Long

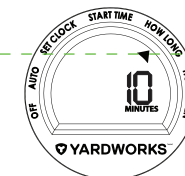

- Turn dial to HOW LONG.
- Using the +/- buttons, select watering duration from 1 to 360 minutes. Timer advances faster if button is held down.
- Press CLEAR button to reset run time.
- Turn dial to save changes.

### How Often



- Turn dial to HOW OFTEN.

Safety

- Using the +/- buttons, set your watering frequency. You may choose to water every 1 hour, 2 hours, 4 hours, 6 hours, 12 hours, or from 1 to 7 days.

Note: 1 is every day, 2 is every other day, etc.

- Turn dial to save changes.

### Congratulations!

Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

### Manual/Hand Watering



This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

- With the dial on AUTO, press the MANUAL button.
- Use the +/- buttons to select watering time from 1 to 360 minutes.
- Screen will flash between clock and hours remaining before programmed cycle resumes.

Note: There may be a slight delay between the time the manual button is pressed and when watering begins.

- To stop manual watering, turn the dial to OFF.
- Turn the dial back to AUTO to resume your programmed watering schedule.

Timer does not water.

Check if:

- Timer is set to AUTO.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time, including AM and PM.
- Rain Delay is on.

Water won't turn off.

Check if:

- HOW LONG is set to desired time.
- HOW OFTEN is set to desired interval hour or day.

Working water pressure:

- Minimum: 10 psi
- Maximum: 100 psi

Working temperature:

- Maximum: Do not exceed 120°F
- Minimum: Keep from freezing

5

model no. 91519 | contact us 1.801.299.5555

### Rain Delay



Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

- With the dial on AUTO, press the +/- buttons to select a delay of 24 hrs, 48 hrs, or from 3 to 7 days.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to OFF and then back to AUTO.

6

model no. 91519 | contact us 1.801.299.5555

### Troubleshooting

Water does not come on at desired time.

Check if:

- Clock is set to correct time, including AM and PM.
- Dial is set to "Auto"
- Start time is set to desired time, including AM and PM.
- Rain Delay is on.



Customer Service  
1-801-299-5555  
orbitonline.com

Orbit® Irrigation Products, Inc.  
North Salt Lake, UT 84054 USA

©2014 Orbit Irrigation Products, Inc.  
All rights reserved. All trade names are registered trademarks of respective manufacturers listed.